


TO CALCULATE THE NUMBER OF FITURES PER DATA ENABLER FOR YOUR INSTALLATION, REFER TO THE FIGURE  
 MAXIMUM RAIN LENGTH FROM DATA ENABLER TO LAST FITURE IN SERIES 12'S FEET CSB NO.

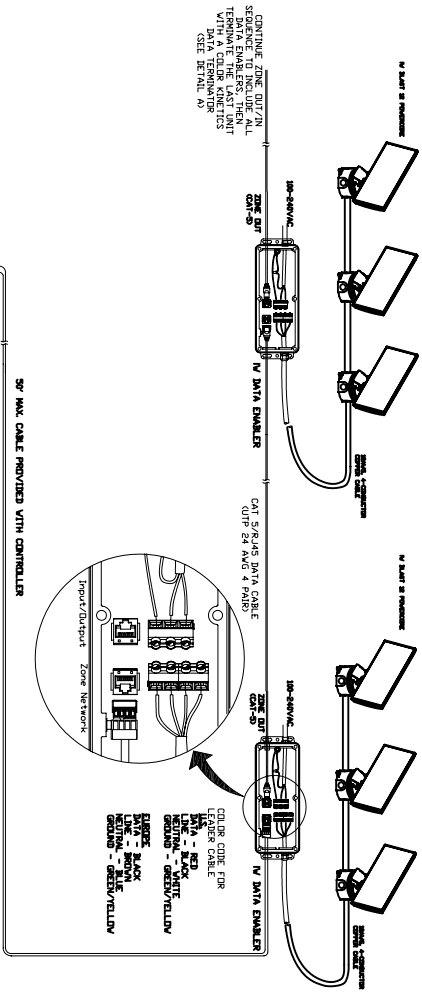


NOTE:  
 - PLACE A DATA TERMINATOR IN THE ZONE NET OUT PORT OF THE LAST  
 - TO CALCULATE THE NUMBER OF FITURES PER IV DATA ENABLER FOR YOUR  
 - CUSTOMER'S INSTALLATION, REFER TO THE CONFIGURATION CALCULATOR  
 - TECHNICAL SUPPORT. SUPPORT FOR USE WITH IVX CONTROLLER OR CONTACT  
 - SEE USER GUIDE FOR CONTACT TECHNICAL SUPPORT FOR ASSISTANCE WITH  
 - ZONE NETWORKING.

SOLO KINETICS  
 10400 WILLOW CREEK DR. #100  
 BOZEMAN, MT 59717  
 TEL: 406.552.9299  
 WWW.SOLOKINETICS.COM

DATA TERMINATOR  
 PLACE IN ZONE NET OUT PORT  
 OF DATA ENABLER WHEN  
 SEVERAL ARE USED

TITLE	DATE
SYSTEM WIRING DIAGRAM (TYP)	12-19-2006
PRODUCTS: IV BLAST 12 POWERCORE/IV DATA ENABLER/IV SCENE CONTROLLER	BMS NIS 1 OF 1

TO CALCULATE THE NUMBER OF FITURES PER DATA ENABLER FOR YOUR INSTALLATION, REFER TO THE FIGURE  
 MAXIMUM RAIN LENGTH FROM DATA ENABLER TO ANY  
 MAXIMUM TOTAL CABLE RUN AND FEET CSB NO.

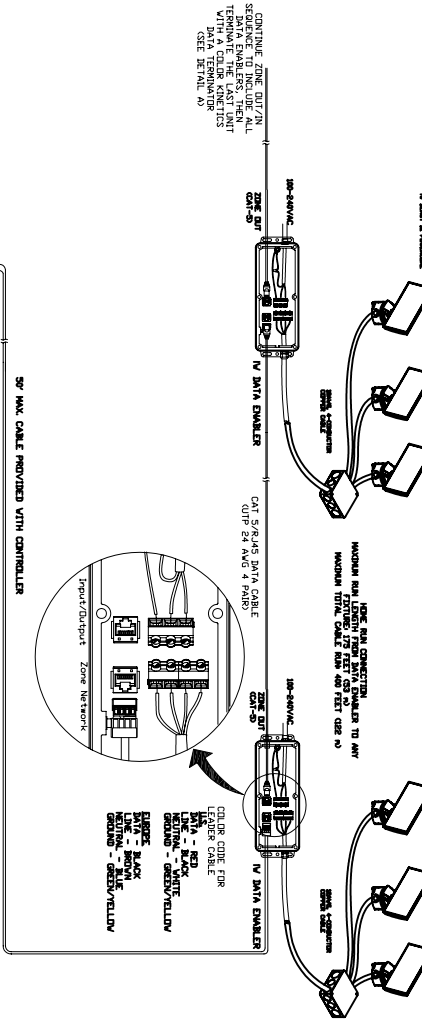

NOTE:  
 - PLACE A DATA TERMINATOR IN THE ZONE NET OUT PORT OF THE LAST  
 - TO CALCULATE THE NUMBER OF FITURES PER IV DATA ENABLER FOR YOUR  
 - CUSTOMER'S INSTALLATION, REFER TO THE CONFIGURATION CALCULATOR  
 - TECHNICAL SUPPORT. SUPPORT FOR USE WITH IVX CONTROLLER OR CONTACT  
 - SEE USER GUIDE FOR CONTACT TECHNICAL SUPPORT FOR ASSISTANCE WITH  
 - ZONE NETWORKING.

SOLO KINETICS  
 10400 WILLOW CREEK DR. #100  
 BOZEMAN, MT 59717  
 TEL: 406.552.9299  
 WWW.SOLOKINETICS.COM

DATA TERMINATOR  
 PLACE IN ZONE NET OUT PORT  
 OF DATA ENABLER WHEN  
 SEVERAL ARE USED

TITLE	DATE
SYSTEM WIRING DIAGRAM (TYP)	12-19-2006
PRODUCTS: IV BLAST 12 POWERCORE/IV DATA ENABLER/IV SCENE CONTROLLER	BMS NIS 1 OF 1