



# eColor Fuse Powercore

Linear interior LED wall grazing luminaire with solid color light

# eColor Fuse Powercore

## Linear interior LED wall grazing luminaire with solid color light

With narrow and medium beams of intense solid color light, eColor Fuse Powercore is an excellent choice for surface grazing and wall-washing applications. Its ultra-compact form factor permits installation in tight spaces too small to accommodate conventional grazing luminaires with similar light output. Lowers installation, energy, and maintenance costs. Offers environmentally-conscious buyers a green, energy-efficient grazing luminaire with industry-leading quality and quantity of light.

- High-performance beam quality — Available in narrow 10° x 60° or medium 30° x 60° beam angle. Superior beam quality delivers striation-free light as close as 152 mm (6 in) from luminaire placement. Interlocking connectors for end-to-end installation with no light scalloping between luminaires.
- Integrates patented Powercore technology — Powercore rapidly, efficiently, and accurately controls power directly from line voltage, eliminating the need for an external power supply, dramatically simplifying installation, and lowering total system cost.
- Support for multiple voltages — Accepts power input of 100 to 277 VAC for consistent installation and operation from line voltage in any location around the world.
- Dimming capability — Patented DIMand technology offers smooth dimming capability with selected commercially available reverse-phase ELV-type dimmers.
- Simple installation — Contractor-friendly installation allows long product runs. Easy-to-install 1.2 m (4 ft) mounting tracks allow quick project setup in linear applications.
- Easy mounting and positioning — With end-to-end locking power connectors that can make turns of up to 180°, eColor Fuse Powercore luminaires are easy to position in even the most challenging mounting circumstances. Luminaires rotate in 10° increments through 180° for precise aiming and color mixing. Optional mounting tracks support vertical and overhead positioning. 305 mm (1 ft) and 1.5 m (5 ft) jumper cables can add extra space between luminaires.



### Cost-effective alternative

Long, useful source life and low-maintenance operation provide a cost-effective alternative to traditional grazing luminaires.

# Specifications

Due to continuous improvements and innovations, specifications may change without notice.



**10° x 60° beam angle**




**30° x 60° beam angle**

\* For help estimating the light output and distribution of eColor lighting luminaires, please contact Philips Color Kinetics Applications Engineering Services at [support@colorkinetics.com](mailto:support@colorkinetics.com).

**DIMAND** | **OPTIBIN** | **POWERCORE**  
CK TECHNOLOGY | CK TECHNOLOGY | CK TECHNOLOGY

Item	Specification	305 mm (1 ft)	1.2 m (4 ft)
Output	Beam Angle	10° x 60° / 30° x 60°	
	Input Voltage	100 to 277 VAC, auto-ranging, 50 / 60 Hz	
Electrical	Power Consumption	12.5 W (Red / Green / Blue)	50 W (Red / Green / Blue)
	Max. at full output, steady state	10 W (Amber)	40 W (Amber)
Control	Dimming	Compatible with selected commercially available reverse-phase ELV-type dimmers*	
Physical	Dimensions (Height x Width x Depth)	53 x 305 x 38 mm (2.1 x 12 x 1.5 in)	53 x 1219 x 41 mm (2.1 x 48 x 1.6 in)
	Weight	0.45 kg (0.98 lbs)	1.98 kg (4.37 lbs)
	Housing	Die-cast aluminium, white powder-coated finish	
	Lens	Polycarbonate	
	Luminaire Connections	Integral male / female connectors	
	Temperature Ranges	-20° – 50° C (-4° – 122° F) Operating -20° – 50° C (-4° – 122° F) Startup -40° – 80° C (-40° – 176° F) Storage	
	Humidity	0 – 95%, non-condensing	
Certification and Safety	Luminaire Run Lengths	To calculate luminaire run lengths and total power consumption for your specific installation, download the Configuration Calculator from <a href="http://www.philipscolorkinetics.com/support/install_tool/">www.philipscolorkinetics.com/support/install_tool/</a>	
	Certification	UL / cUL, FCC Class B, CE, CCC, SAA, C-Tick	
	Environment	Dry / Damp Location, IP20	


\* Refer to [www.philipscolorkinetics.com/support/appnotes/](http://www.philipscolorkinetics.com/support/appnotes/) for specific details.

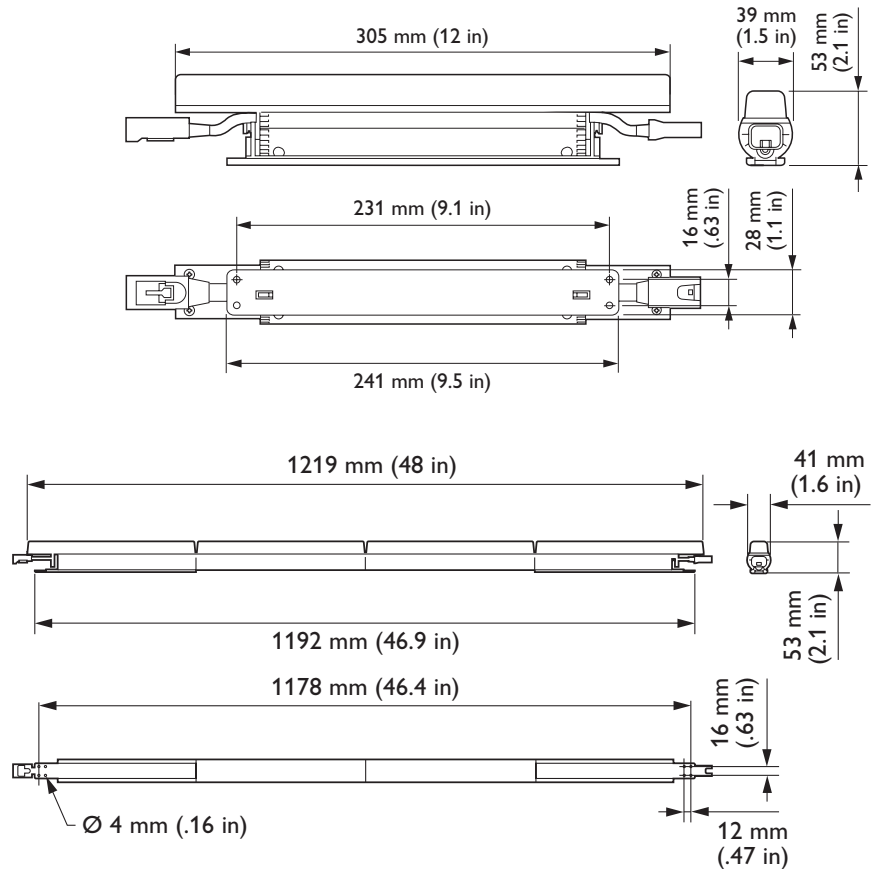

# Product Selection


To order eColor Fuse Powercore, select luminaire color, beam angle, luminaire length, line voltage connection option, and any extra options you might need.

**1** Choose luminaire color

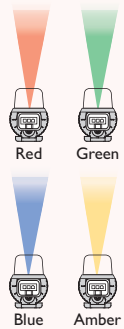


Red Green  
Blue Amber

**2** Choose beam angle




10° x 60°  
30° x 60°

**3** Choose luminaire length

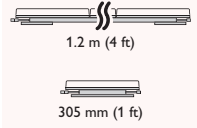


1.2 m (4 ft)  
305 mm (1 ft)

**4** Choose line voltage connection option

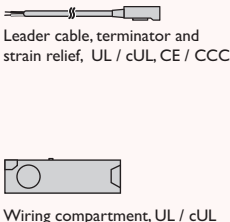

Leader cable, terminator and strain relief, UL / cUL, CE / CCC  
Wiring compartment, UL / cUL

**5** Choose extra options

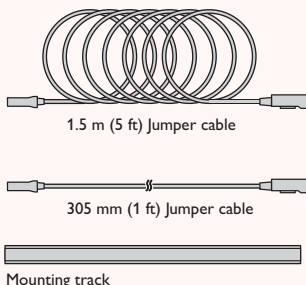

1.5 m (5 ft) Jumper cable  
305 mm (1 ft) Jumper cable  
Mounting track

## Luminaires

Item	Color	Beam Angle	Item Number	Philips 12NC
eColor Fuse Powercore 305 mm (1 ft)	Red	10° x 60°	223-000065-08	910503701709
		30° x 60°	223-000065-12	910503701713
	Green	10° x 60°	223-000065-09	910503701710
		30° x 60°	223-000065-13	910503701714
	Blue	10° x 60°	223-000065-10	910503701711
		30° x 60°	223-000065-14	910503701715
	Amber	10° x 60°	223-000065-11	910503701712
		30° x 60°	223-000065-15	910503701716

Item	Color	Beam Angle	Item Number	Philips 12NC
eColor Fuse Powercore 1.2 m (4 ft)	Red	10° x 60°	223-000065-16	910503702599
		30° x 60°	223-000065-20	910503702604
	Green	10° x 60°	223-000065-17	910503702601
		30° x 60°	223-000065-21	910503702605
	Blue	10° x 60°	223-000065-18	910503702602
		30° x 60°	223-000065-22	910503702606
	Amber	10° x 60°	223-000065-19	910503702603
		30° x 60°	223-000065-23	910503702607

Use Item Number when ordering in North America.

## Accessories

Item	Type / Qty.	Length	Item Number	Philips 12NC
Leader Cable with terminator and strain relief	UL / cUL	3 m (10 ft)	108-000047-00	910503700972
	CE / CCC	3 m (10 ft)	108-000047-01	910503700973
Wiring Compartment with terminator	UL / cUL		120-000077-01	910503700994
Jumper Cable	UL / cUL	305 mm (1 ft)	108-000048-00	910503700974
		1.5 m (5 ft)	108-000048-01	910503700975
	CE / CCC	305 mm (1 ft)	108-000048-02	910503700976
		1.5 m (5 ft)	108-000048-03	910503700977
Terminators	Quantity 10		120-000099-00	910503701120
Mounting Track, White	Quantity 1	1219 mm (4 ft)	120-000124-00	910503701787

For connection to standard junction box

Can be used for direct connection to conduit

Depending on the installation's design, you may need jumper cables to add space between luminaires.

Optional mounting track ensures straight runs of luminaires.

Use Item Number when ordering in North America.


## Included in the box

eColor Fuse Powercore luminaire  
Installation Instructions


✱ Refer to the eW / eColor Fuse Powercore Installation Instructions for specific warning and caution statements.

## Easy turns

End-to-end locking power connectors can make turns of up to 180° without jumper cables.

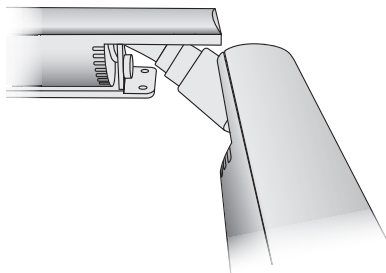

## Distance between luminaires joined end-to-end

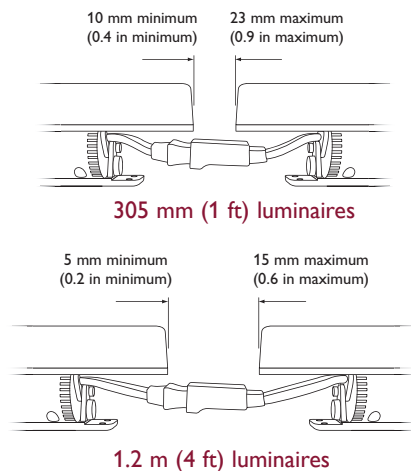

✱ To calculate the number of luminaires your specific installation can support, download the Configuration Calculator from [www.philipscolorkinetics.com/support/install\\_tool/](http://www.philipscolorkinetics.com/support/install_tool/), or consult Philips Color Kinetics Application Engineering Services at [support@colorkinetics.com](mailto:support@colorkinetics.com).

✱ Refer to the installation instructions included with the wall or dimmer switch for installation and wiring information.

# Installation

eColor Fuse Powercore offers high-output, energy-efficient indoor solid color cove and indirect lighting with Powercore technology. Powercore technology, which integrates LED power and data management within the luminaire, eases installation by eliminating the need for external power supplies.

## Owner / User Responsibilities

It is the responsibility of the contractor, installer, purchaser, owner, and user to install, maintain, and operate eColor Fuse Powercore luminaires in such a manner as to comply with all applicable codes, state and local laws, ordinances, and regulations. Consult with the appropriate electrical inspector to ensure compliance.

## Create a Layout Plan

Regardless of the size and complexity of your installation, the time you spend up front can help minimize installation and configuration issues later. Keep these suggestions in mind as you plan your installation:

- On an architectural diagram or other diagram that shows the physical layout of the installation, create a layout map that specifies the appropriate location of the light luminaires in relation to each other, and to any dimmer switches, wall switches, and line power sources. Identify any obstacles or physical features requiring flexible jumper cables between luminaires.
- eColor Fuse Powercore luminaires are installed in series. The in-line connectors allow end-to-end luminaire connections for the best visual effects. Joined directly together, the connectors on the 305 mm (1 ft) luminaires allow for spacing of 10 mm (0.4 in) to 23 mm (0.9 in) without a jumper cable, while the connectors on the 1.2 m (4 ft) luminaires allow for spacing of 23 mm (0.9 in) to 51 mm (2 in) without a jumper cable. When you need to separate luminaires by more than these minimums, use the 305 mm (1 ft) or 1.5 m (5 ft) jumper cables.
- You can install a run of eColor Fuse Powercore luminaires using the 3 m (10 ft) Leader Cable with flying leads. This option is preferable when connecting to a third-party junction box, or when retrofitting an existing incandescent or fluorescent cove lighting installation.

## Install Wall and Dimmer Switches (Optional)

eColor Fuse Powercore luminaires can be controlled either with a standard wall switch (on / off) or a compatible, commercially available reverse-phase ELV-type dimmer.

For a list of compatible ELV dimmers, and for details on selecting the appropriate dimmer for your lighting installation, visit [www.philipscolorkinetics.com/support/appnotes](http://www.philipscolorkinetics.com/support/appnotes), or consult Applications Engineering services at [support@colorkinetics.com](mailto:support@colorkinetics.com).

## Prepare for the Installation

- Verify that all supporting equipment (switches, line power sources) is in place.
- If your installation calls for jumper cables to add space between luminaires, make sure they are available.
- Ensure that all additional parts (optional mounting tracks, mounting hardware, terminators) and tools are available.


## Install the Luminaires


You can mount eColor Fuse Powercore luminaires directly to a wall, ceiling, cabinet, or other secure surface. You can install several eColor Fuse Powercore luminaires in optional 1.2 m (4 ft) lengths of mounting track to ensure a straight run.

### Install Mounting Tracks (Optional)

1. Field-cut the mounting tracks to the desired length with a hacksaw or tin snips.
2. Install the mounting tracks using hardware suitable for the mounting surface.

To ensure proper luminaire fit, hardware must not extend above the track standoffs after installation. The recommended maximum spacing between screws is 305 mm (12 in).

 You can use the luminaire base as a template when pre-drilled pilot holes are required. Hold the luminaire in place and mark the four screw holes.

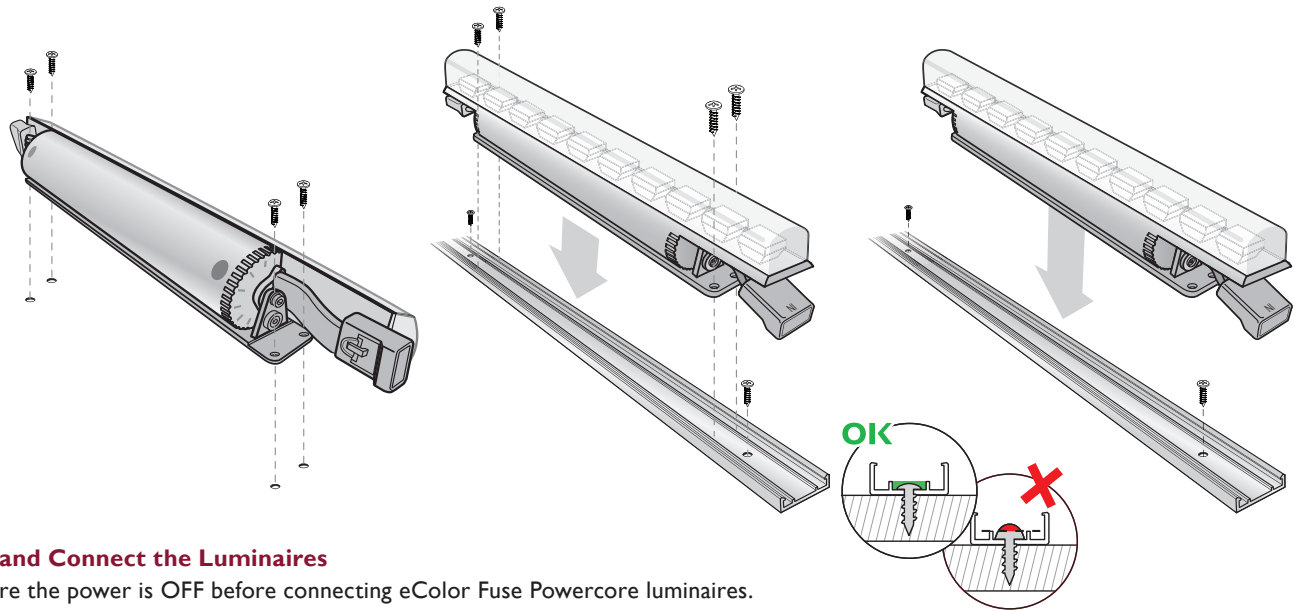

### Mount and Connect the Luminaires

Make sure the power is OFF before connecting eColor Fuse Powercore luminaires.


1. Rotate an eColor Fuse Powercore luminaire as necessary to provide unobstructed access to the mounting holes.
2. Position the first luminaire in a series.

If using mounting tracks on a horizontal surface, snap the luminaire into the track.


If using mounting tracks on vertical or overhead surfaces, or if not using mounting tracks, attach 305 mm (1 ft) luminaires with four #6 (3.5 mm) mounting screws each (not included) suitable for the mounting surface. Attach 1.2 m (4 ft) luminaires with eight #6 (3.5 mm) mounting screws suitable for the mounting surface, four at each end of the luminaire.

Ensure that the male connector is in position to receive power from the female connector on the Leader Cable or Wiring Compartment.

### Mounting 1.2 m (4 ft) luminaires

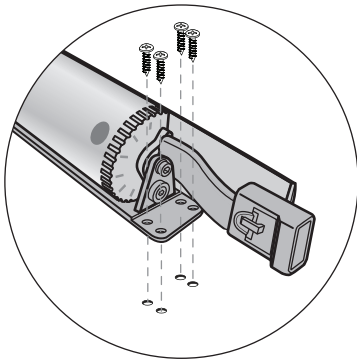

- Position the next luminaire in the series, matching the male connector end to the female connector of the previously mounted luminaire. Attach the luminaire to the surface or snap it into the track.

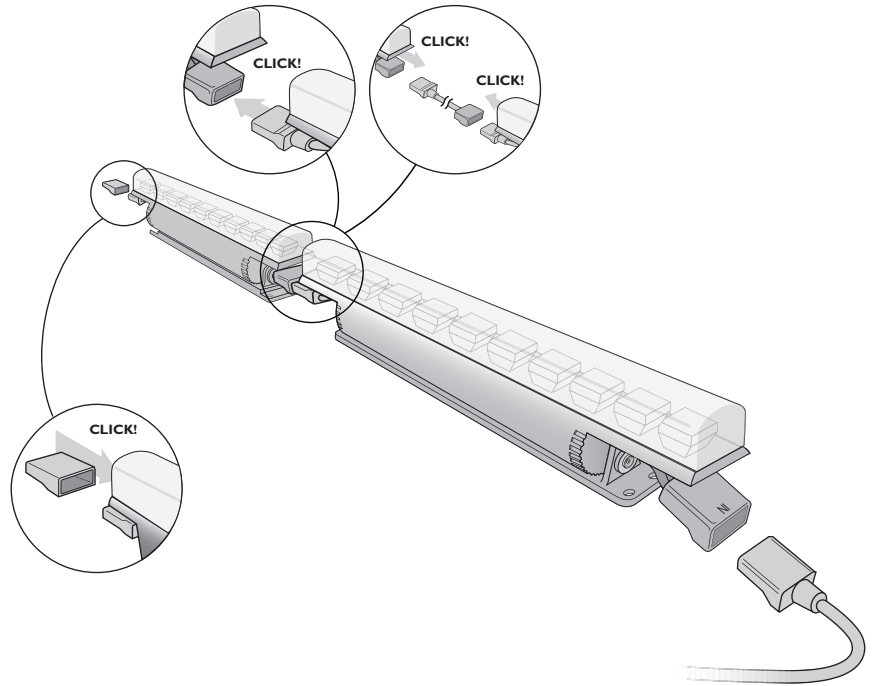



- Continue mounting the luminaires making power connections as you go, until all lights in the series are mounted.
- Insert the provided terminator into the last luminaire in the series.

## Make Power Connections

**To run power or conduit to the first luminaire in a series (UL / cUL installations):**

- Remove the cover from the eW Fuse Powercore Wiring Compartment.


### Wiring Compartment dimensions

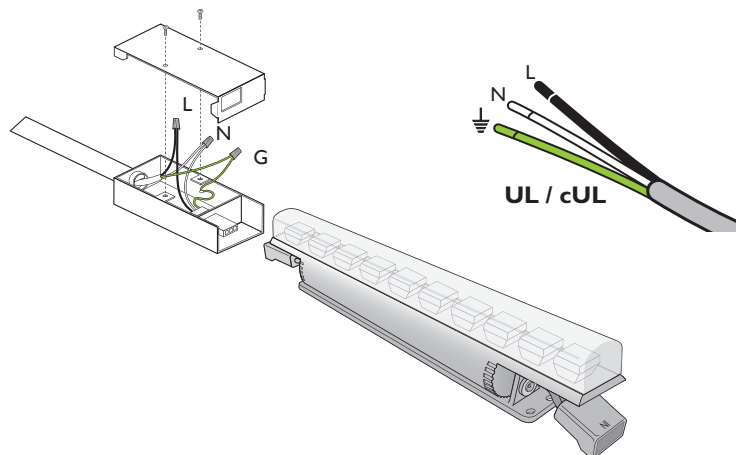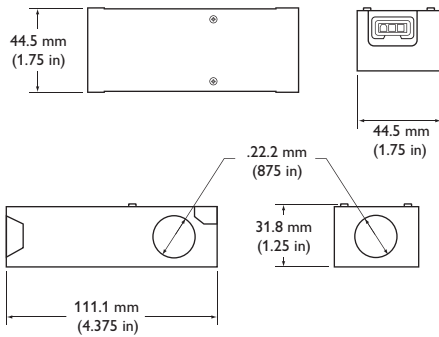

- Using wire nuts, connect ground, neutral, and line inside the Wiring Compartment housing, then replace the cover.
- Connect the eW Cove Powercore Wiring Compartment to the first luminaire in the series.

**To connect the first luminaire in a series to a third-party junction box using the 3 m (10 ft) Leader Cable (UL / cUL installations):**

- Remove the cover of the third-party junction box.


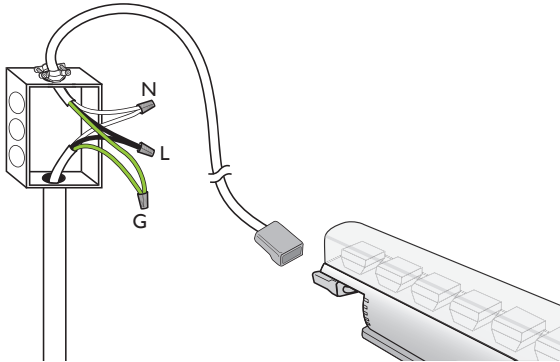


- Connect ground, neutral, and line inside the junction box housing, then replace the junction box cover.
- Connect the 3 m (10 ft) Leader Cable to the first luminaire in the series.

**For CE / CCC installations:**

- Connect the Leader Cable to a terminal block. For CE installation, the terminal block must conform to EN 60998-2-1 or EN 60998-2-2, rated 220 – 240 VAC.
- Connect ground, neutral, and line to a power source.
- Connect the 3 m (10 ft) Leader Cable to the first luminaire in the series.

## Leader Cable connector dimensions

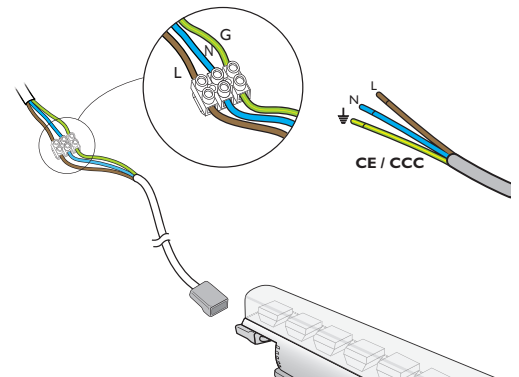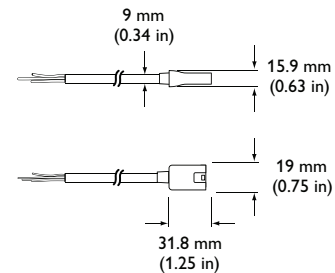


## Aim and Lock the Luminaires


Make sure the power is ON before aiming luminaires.

Aim the luminaires by rotating each luminaire to the correct angle. There are detents every 10° in the bracket that hold the luminaire in position.

(Optional) Using a 2 mm hex key wrench, tighten the set screw located on each end of the luminaire to lock the luminaire in place.

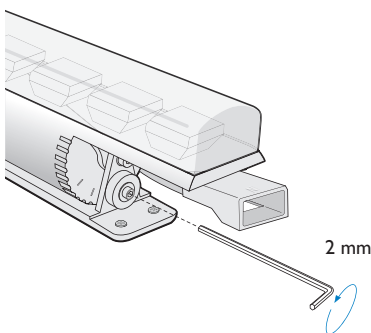

**\* Do not look directly into beam when aiming luminaires.**

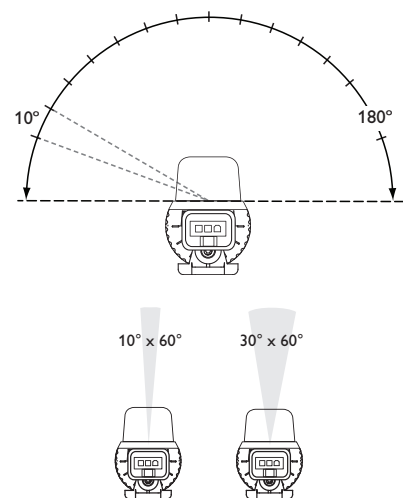

Philips Color Kinetics  
3 Burlington Woods Drive  
Burlington, Massachusetts 01803 USA  
Tel 888.385.5742  
Tel 617.423.9999  
Fax 617.423.9998  
www.philipscolorkinetics.com

Copyright © 2011 – 2017 Philips Lighting Holding B.V. All rights reserved.  
Chromacore, Chromasic, CK, the CK logo, Color Kinetics, the Color Kinetics logo, ColorBlast, ColorBlaze, ColorBurst, ColorGraze, ColorPlay, ColorReach, iW Reach, eW Reach, eW Fuse, DILMand, EssentialWhite, eW, iColor, iColor Cove, IntelliWhite, iW, iPlayer, Optibin, and Powercore are either registered trademarks or trademarks of Philips Lighting Holding B.V. in the United States and / or other countries. All other brand or product names are trademarks or registered trademarks of their respective owners. Due to continuous improvements and innovations, specifications may change without notice.

DAS-000096-00 R03 07-17